

BLF Castor Kit Fitting Instructions

- Note: For safety reasons a BLF Castor Kit must only be fitted to a cabinet that features concrete counter balances.
- 1) Remove BLF Castor Kit from packaging and separate the four castor support pieces and spanner.
 - 2) Lay cabinet on its back and remove the adjustable feet.
 - 3) Insert the castor support pieces into the cabinet and secure with the supplied washers and bolts. Note the castor plates include arrows which must face to the front of the cabinet and the narrow pieces fit into the front of the cabinet.
 - 4) Secure the castors to the castor supports with the supplied spanner. Note both braked castors must be placed on the front of the cabinet.
 - 5) To complete, stand the cabinet up, and roll it into position.



Un-Braked Caster x 2 (80500710)


M10 bolt x 4 (80100879)

M10 washer x 4 (80130897)


BLF Caster Plate set (including spanner) (LF5864E)

Braked Caster x 2 (80500711)

Contents of BLF Castor Kit

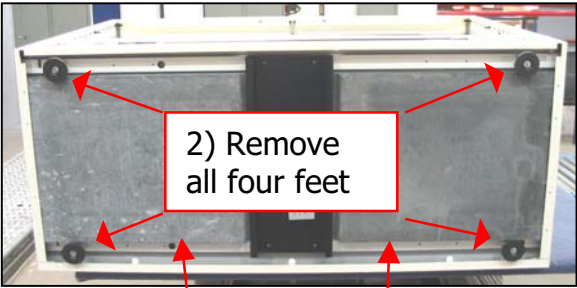

Concrete counter balance weights

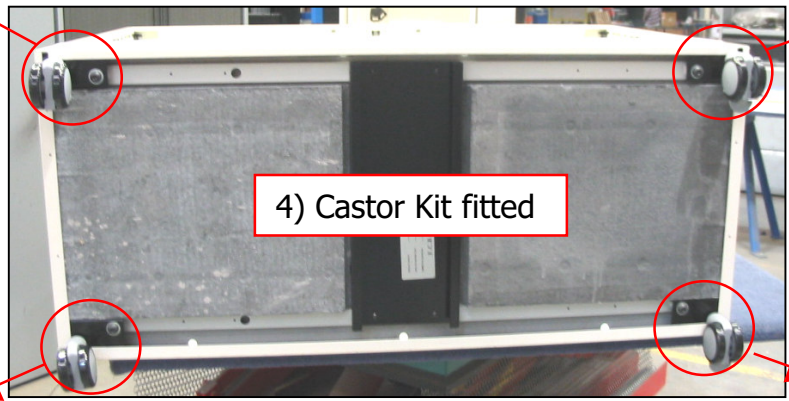

Note: arrows on all castor plates to face the front of the cabinet

